

# Ethene, Ethylene Gas Sensor C2H4/C-200

C2H4 Gas Sensor in Compact Housing

### **Applications**

- Discontinuous Measurement
- Fruit Ripening

### **Measurement**

Operation Principle	3-Electrode Electrochemical
Nominal Range	0 - 200 ppm
Maximum Overload	400 ppm
Inboard Filter	-
Output Signal	100 ± 30 nA/ppm
Resolution (Electronics dependent)	< 0.5 ppm
T80 Response Time	< 60 s
Typical Baseline Range (pure air, 20°C)	-1 ppm to 4 ppm
Maximum Zero Shift (+20°C to +40°C)	see Graph
Repeatability	< 2 % of signal
Output Linearity	Linear
Gain (Only applies to 4-Electrode sensors)	-

Rev.: Nov-22

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 1 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



# Ethene, Ethylene Gas Sensor C2H4/C-200

<u>Electrical</u>	
Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	not recommended
Conformity to RoHS directive	RoHS Compliance
<u>Environmental</u>	
Relative Humidity Range	15 % to 90 % RH non-condensing
Temperature Range	-40 °C to 50 °C
Pressure Range	Atmospheric ± 10%
Pressure Coefficient	N.D.
Humidity Effect	None
<u>Lifetime</u>	
Expected Operation Life	2 years in air
Expected Long Term Output Drift in air	< 5 % signal loss per month
Filter Life	
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C
Warranty Period	12 months from date of dispatch

Rev.: Nov-22

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 2 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland


### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar






### Ethene, Ethylene Gas Sensor C2H4/C-200

### **Compact-Size Outline Dimensions**

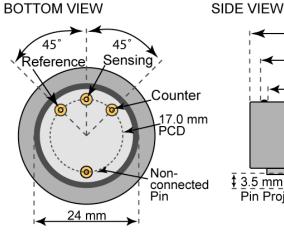

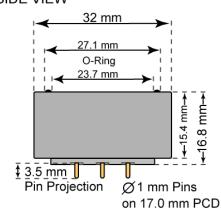

± 0.10 mm

### **Mechanical**

Weight	13 g
Orientation	Any
Housing material	Polycarbonate

Rev.: Nov-22Page 3 of 6Phone: +41 43 311 72 00Membrapor AGFax: +41 43 311 72 01Birkenweg 2E-Mail: info@membrapor.chCH-8304 WallisellenWebsite: www.membrapor.chSwitzerlandPerformance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



# Ethene, Ethylene Gas Sensor C2H4/C-200

### **Cross Sensitivity Data**

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Concentration [ppm]	Reading [ppm]
CO	100	< 60
Ethanol (C₂H₅OH)	30	~ 21
H <sub>2</sub>	100	~ 50

Rev.: Nov-22

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 4 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar




# Ethene, Ethylene Gas Sensor C2H4/C-200

### Temperature dependence

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

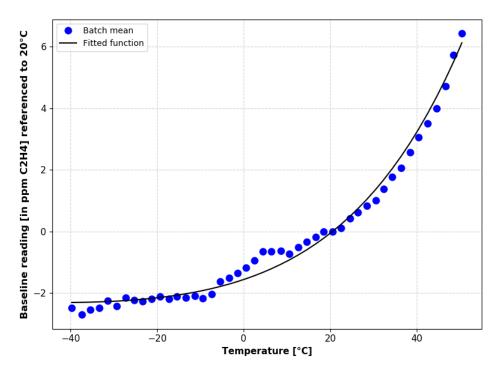

Baseline shifted with respect to reference point at 20°C.

Rev.: Nov-22

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 5 of 6


Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar





### Ethene, Ethylene Gas Sensor C2H4/C-200

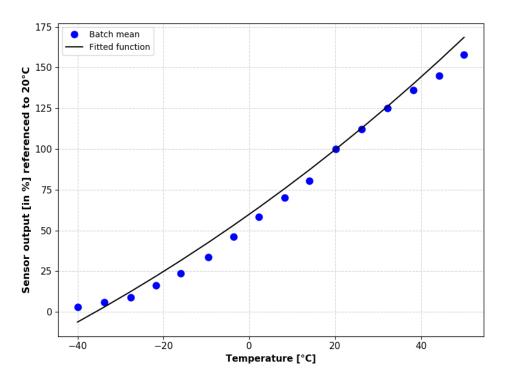

Sensitivity dependence expressed as a percentage of the output signal at reference point at 20 °C.

Rev.: Nov-22

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 6 of 6

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar