

# **Specification Sheet**



# **Ethylene Oxide Gas Sensor ETO/C-20**

C2H4O Gas Sensor in Compact Housing

### **Key Features**

Highly sensitive ETO measurement

### **Applications**

- Sterilization Processes
- · Safety and Process Control

## **Measurement**

Operation Principle	3-Electrode Electrochemical	
Nominal Range	0 - 20 ppm	
Maximum Overload	40 ppm	
Inboard Filter	-	
Output Signal	2500 ± 600 nA/ppm	
Resolution (Electronics dependent)	< 0.05 ppm	
T90 Response Time	< 100 s	
Typical Baseline Range (pure air, 20°C)	0.1 ppm to 1.5 ppm <sup>1)</sup>	
Maximum Zero Shift (+20°C to +40°C)	see Graph	
Repeatability	< 2 % of signal	
Output Linearity	Linear	
Gain (Only applies to 4-Electrode sensors)	-	

<sup>1)</sup> Fresh sensors with bias need 24 - 72 h for stabilization of the baseline.

Rev.: Jun-24 Page 1 of 6

Phone: +41 43 311 72 00
Fax: +41 43 311 72 01
E-Mail: info@membrapor.ch
Website: www.membrapor.ch

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar



# **Specification Sheet**





# **Electrical**

Rec. Load Resistor  $10 - 33 \Omega$ Bias (V\_Sens-V\_Ref) +300 mV

Conformity to RoHS directive RoHS Compliance

## **Environmental**

Relative Humidity Range	15 % to 90 % RH non-condensing	
Temperature Range	-40 °C to 50 °C	
Pressure Range	Atmospheric	
Pressure Coefficient	N.D.	
Humidity Effect	None	

### Lifetime

Expected Operation Life	2 years in air	
Expected Long Term Output Drift in air	< 2 % signal loss per month	
Filter Life	not applicable	
Storage Life	6 months in container	
Rec. Storage Temperature	5°C - 20°C	
Warranty Period	12 months from date of dispatch	

Rev.: Jun-24 Page 2 of 6

Phone: +41 43 311 72 00 Membrapor AG
Fax: +41 43 311 72 01 Birkenweg 2
E-Mail: info@membrapor.ch
Website: www.membrapor.ch
Switzerland


### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







#### **Compact-Size Outline Dimensions**

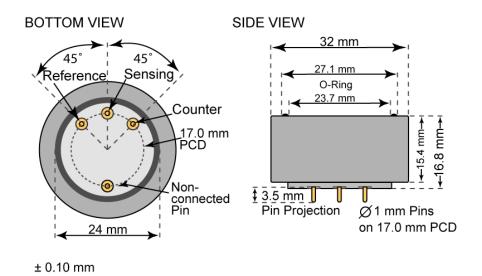

# Mechanical

Weight	13 g
Orientation	Any
Housing material	Polycarbonate

Rev.: Jun-24 Page 3 of 6

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar











## **Cross Sensitivity Data**

The table below does not claim to be complete. We recommend using the target gas for calibration purposes. Using surrogate (interfering) gases can result in inaccuracies in the final calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Concentration [ppm]	Reading [ppm]
Acetic Acid (CH <sub>3</sub> COOH)	16	0
Acetone (C <sub>3</sub> H <sub>6</sub> O)	300	~ 2
Benzene (C <sub>6</sub> H <sub>6</sub> )	100	~ 10
CH <sub>2</sub> O	5	10
CO	100	40 ± 10
Ethanol (C <sub>2</sub> H <sub>5</sub> OH)	30	21
Formic Acid (HCOOH)	42	42 ± 3
H <sub>2</sub>	200	2
H <sub>2</sub> S	20	42 ± 2
Methanol (CH₃OH)	80	~ 55
Methyl Mercaptan (MM, CH₃SH)	10	~ 12
NH <sub>3</sub>	80	0
NO	50	40
NO <sub>2</sub>	5	0
Tert-Butyl Mercaptan (TBM, (CH <sub>3</sub> ) <sub>3</sub> CSH)	10	~ 11
Toluene (C <sub>7</sub> H <sub>8</sub> )	30	6
Xylene (C <sub>8</sub> H10)	25	5

Rev.: Jun-24 Page 4 of 6

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar








## **Temperature dependence**

The output of an electrochemical sensor varies with temperature. The graphs below show the temperature-dependent variation of baseline and sensitivity, respectively. The results shown here are raw data (batch average) without any post-processing steps. The sensitivity and baseline are referenced to the signal at 20°C (reference point).

Please note: It is highly recommended to acquire the temperature dependence curves with the whole instrument. The sampling system, the humidity, the electronics and the interaction between the electronics and the sensor have a significant impact on the temperature dependence of the final measurement reading.

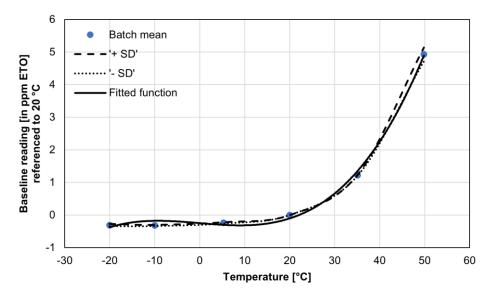

Baseline shifted with respect to reference point at 20°C.

Rev.: Jun-24 Page 5 of 6


Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar







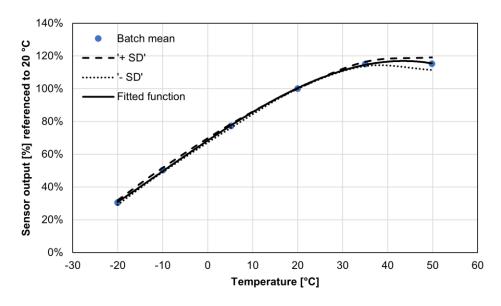

Sensitivity dependence expressed as a percentage of the output signal at reference point at 20 °C.

Rev.: Jun-24 Page 6 of 6

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: info@membrapor.ch Website: www.membrapor.ch Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 - 25 °C, 30 - 50% RH, 900 - 1100 mbar