# **MEMBRAPOR** Specification Sheet



# Hydrogen Gas Sensor H2/SA-1000

H2 Gas Sensor in Standard Housing

# **Applications**

- Safety and Process Control
- H2 Detection in H2/CO-Mixtures
- Medical Applications

### **Measurement**

Operation Principle	3-Electrode Electrochemical
Nominal Range	0 - 1000 ppm
Maximum Overload	2000 ppm
Inboard Filter	To remove CO
Output Signal	28.5 ± 11.5 nA/ppm
Resolution (Electronics dependent)	< 1.8 ppm
T90 Response Time	< 40 s
Typical Baseline Range (pure air, 20°C)	-10 ppm to 10 ppm
Maximum Zero Shift (+20°C to +40°C)	20 ppm
Repeatability	< 2 % of signal
Output Linearity	Linear
Gain (Only applies to 4-Electrode sensors)	-

Rev.: Jan-21

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 1 of 4

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar





# Hydrogen Gas Sensor H2/SA-1000

## **Electrical**

Rec. Load Resistor	10 - 33 Ω
Bias (V_Sens-V_Ref)	not recommended
Conformity to RoHS directive	RoHS Compliance
<u>Environmental</u>	
Relative Humidity Range	15 % to 90 % RH non-condensing
Temperature Range	-40 °C to 50 °C
Pressure Range	Atmospheric ± 10%
Pressure Coefficient	N.D.
Humidity Effect	None

### **Lifetime**

Expected Operation Life	2 years in air
Expected Long Term Output Drift in air	< 2 % signal loss per month after stabilization
Filter Life	N.D.
Storage Life	6 months in container
Rec. Storage Temperature	5°C - 20°C
Warranty Period	12 months from date of dispatch

Rev.: Jan-21

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 2 of 4

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland


#### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar





# Hydrogen Gas Sensor H2/SA-1000

#### Standard-Size Outline Dimensions

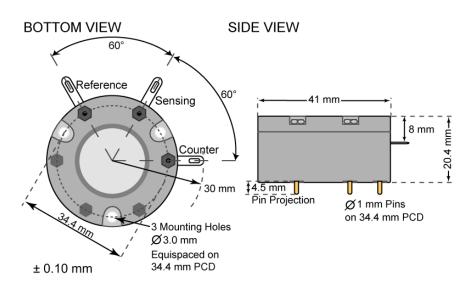

### **Mechanical**

Weight	32 g
Orientation	Any
Housing material	Polycarbonate

Rev.: Jan-21	Page 3 of 4
Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u>	Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland
Performance data recorded at 20 – 25 °C, 30 - 50%	•

# **MEMBRAPOR** Specification Sheet



# Hydrogen Gas Sensor H2/SA-1000

## Cross Sensitivity Data

The table below does not claim to be complete. Interfering gases should not be used for calibration. Please contact Membrapor AG for further support regarding cross sensitivities.

Interfering Gas	Concentration [ppm]	Reading [ppm]
CO	600	< 18

### **Important Application Notes**

- Disinfection solutions containing alcohols and other VOCs must be avoided.
- The CO cross sensitivity in the table is valid for temperatures  $\ge 20^{\circ}$ C.
- The CO cross sensitivity can be > 5% for temperatures <  $0^{\circ}$ C.

Rev.: Jan-21

Phone: +41 43 311 72 00 Fax: +41 43 311 72 01 E-Mail: <u>info@membrapor.ch</u> Website: <u>www.membrapor.ch</u> Page 4 of 4

Membrapor AG Birkenweg 2 CH-8304 Wallisellen Switzerland

#### Performance data recorded at 20 – 25 °C, 30 - 50% RH, 900 - 1100 mbar